


Note: if a library availability error occurs when opening the Toolkit:

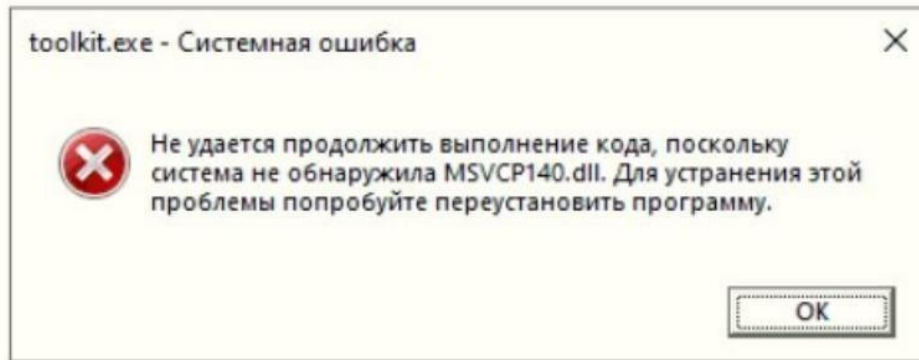


You must install the latest supported versions of the Visual C++
Redistributable component

<https://www.techpowerup.com/download/visual-c-redistributable-runtime-package-all-in-one/>


How to Install vnish.ru Firmware by Vnish Toolkit

1. Open the Toolkit software .
2. Click on “ New ranges group ” button :

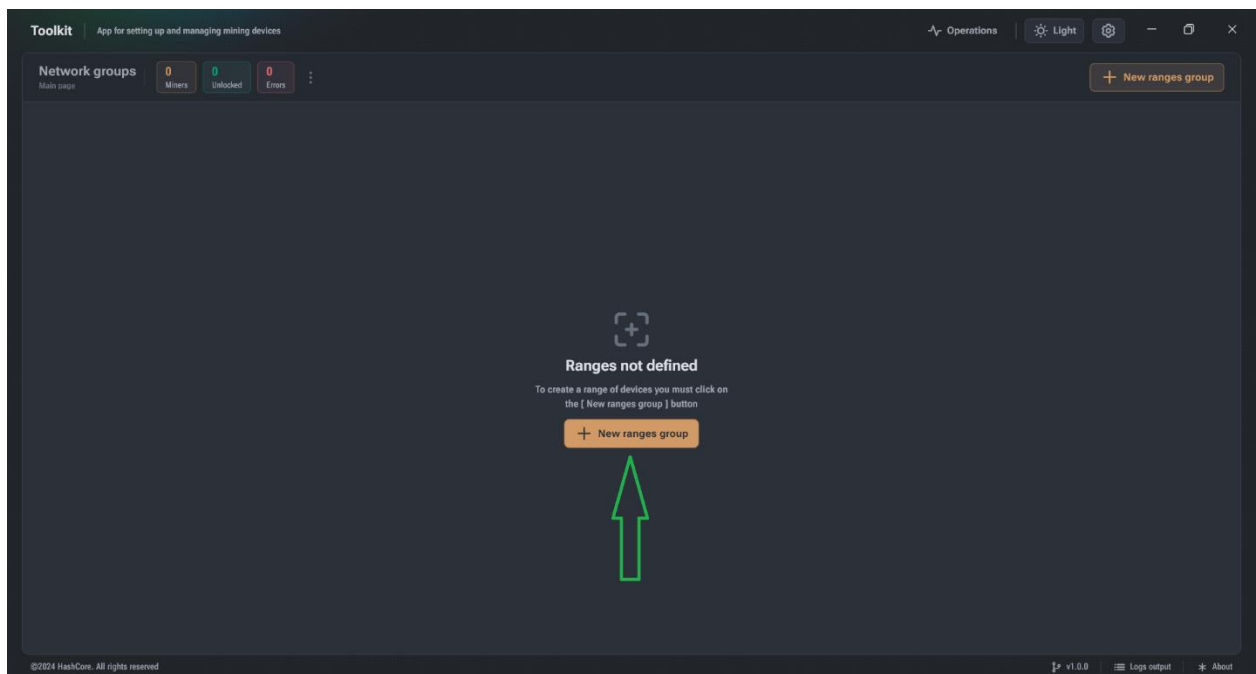


3. Now need to make a group for the IP range
 - Choose a name on “ Group Name ” box
 - Put your own description on “ Group description ” box
 - Choose your IP range on range box


Vnish.ru Toolkit Tutorial – Install Vnish Firmware

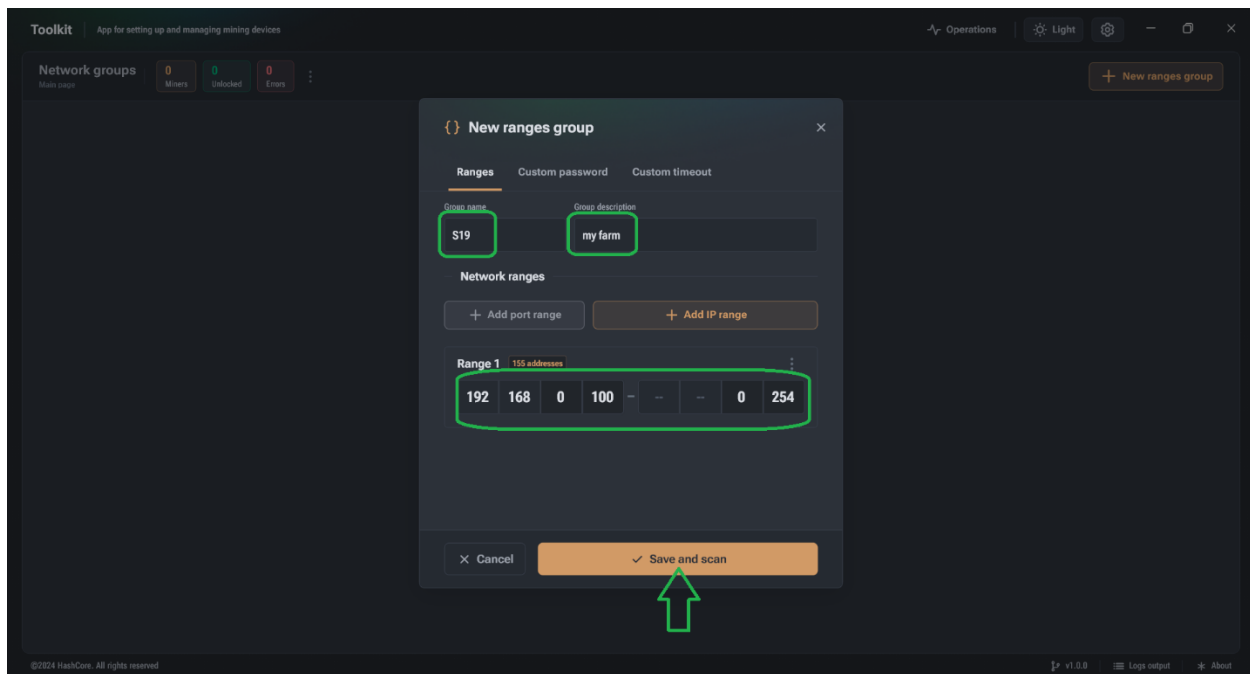

- Additional description :
 - If you changed the default password (root) , click on “ Custom password ” tab and then enable “ Custom password for unlock device ”

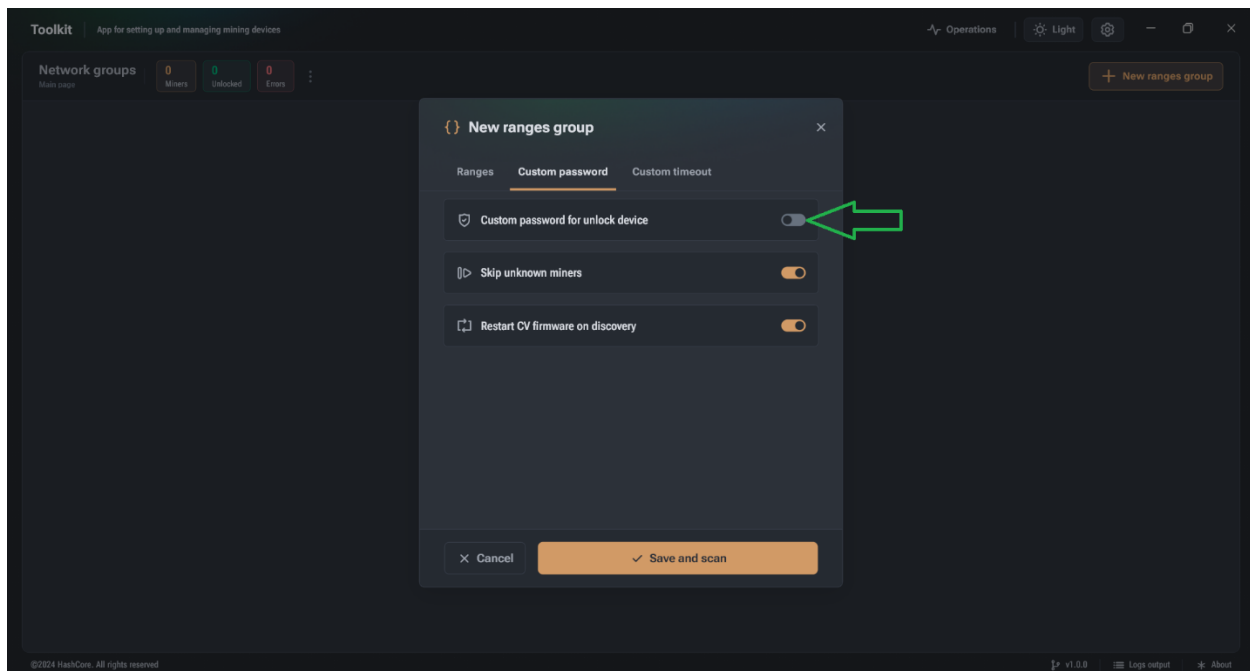


And then scroll down and enable “ Bitmain Firmware ” and click on drop down menu to see the Password . On Password box you can put your miner’s password

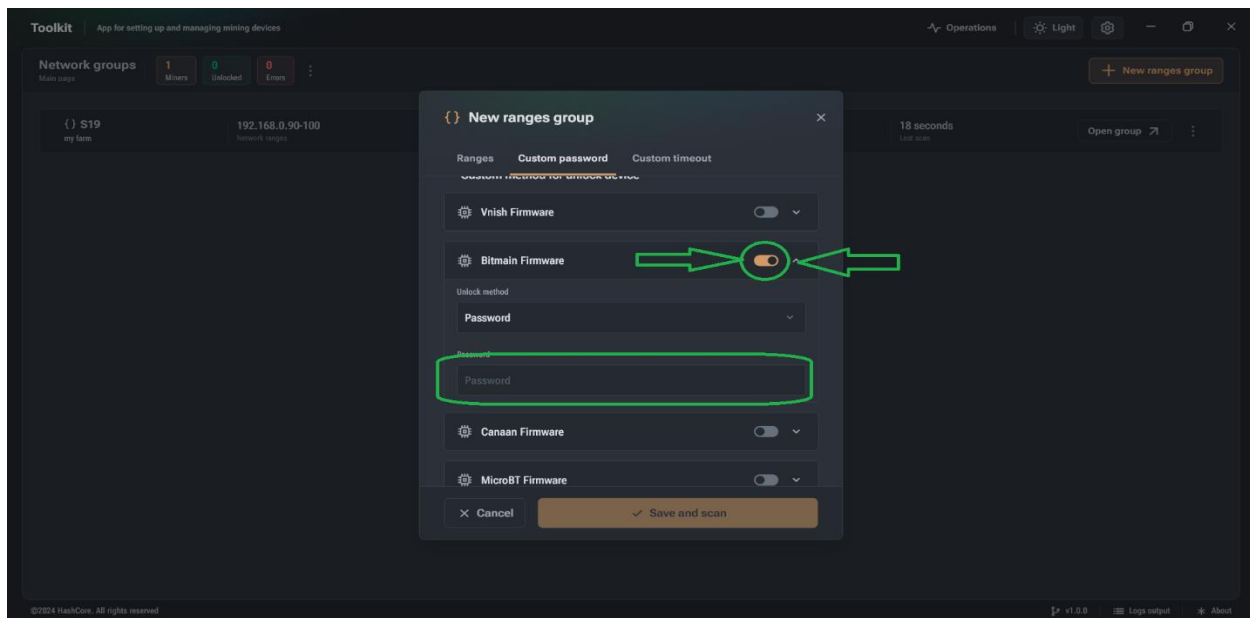


4. Now Click “ Save and Scan ”


5. Click on “ Open Group ”to see the miners on IP range .

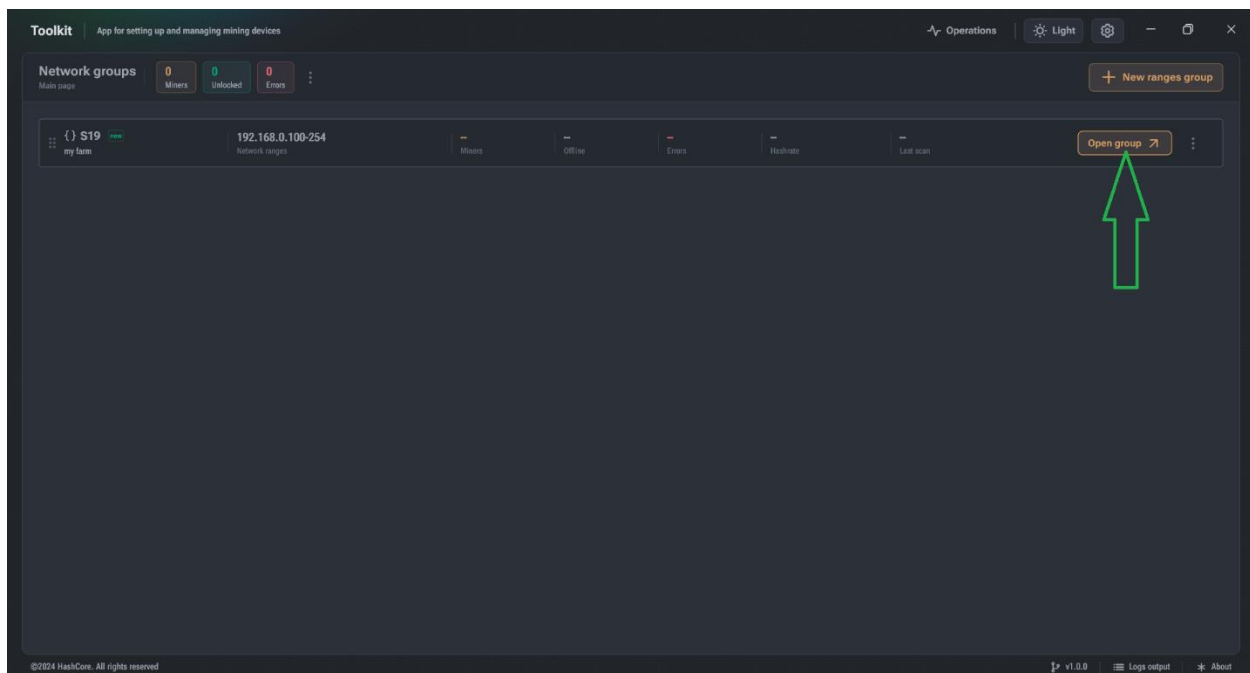

6. Now select the miner you want to install Vnish firmware on it and click on “Commands” button :

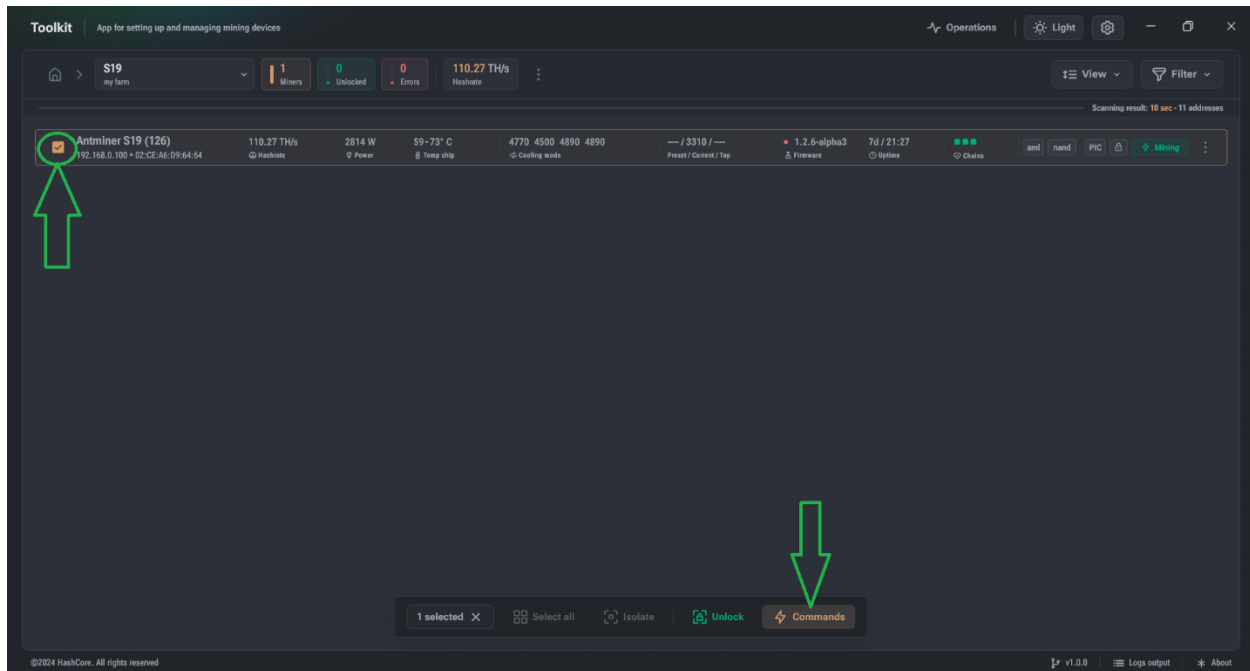

7. On Commands page click on “Install Firmware” button :

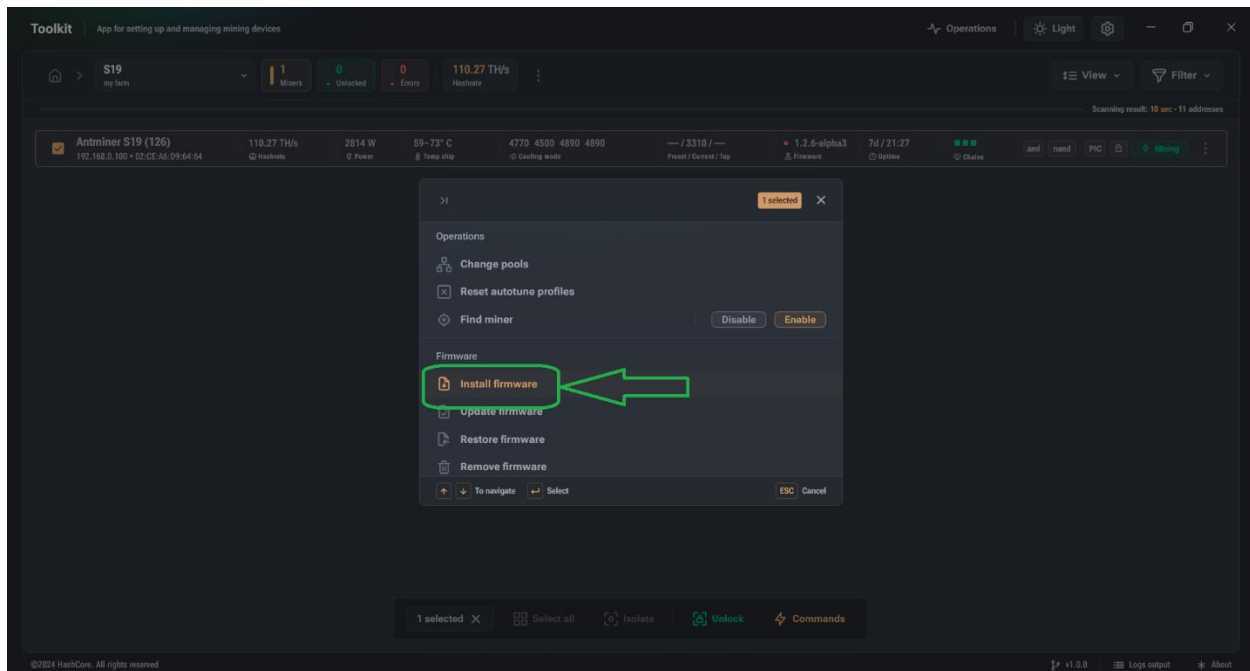


8. Then the Install page appears : Click on “ Select ” button to select the the folder where the firmware files will be located (It is necessary to download the nand install firmware files for your model in advance and place them in a folder, the firmware files will not be visible when selecting folders, this is normal) fill the boxes with information like picture below :

Firmware name : vnishru

Firmware Version : 1.2.6-rc3

The screenshot displays the 'Installing firmware' window of the Vnish.ru Toolkit. At the top, there are two tabs, both labeled 'Installing firmware' with a '1 selected' indicator and a close button. The active tab shows the 'Firmware directory' section, which includes a 'Not selected' status and a 'Select' button with a folder icon. A green arrow points to the 'Select' button. Below this is the 'Firmware install options' section, which contains several input fields: 'Firmware name' with the value 'vnishru', 'Firmware version' with the value '1.2.6-rc3', 'Number of threads' with the value '3', and 'SSH port' with the value '22'. At the bottom, there is a 'Miner model' dropdown menu with the option 'Detect automatically' selected.

9. In the "operations" section, you can view the result of the installation process, if any error was made, then the error decryption will be indicated

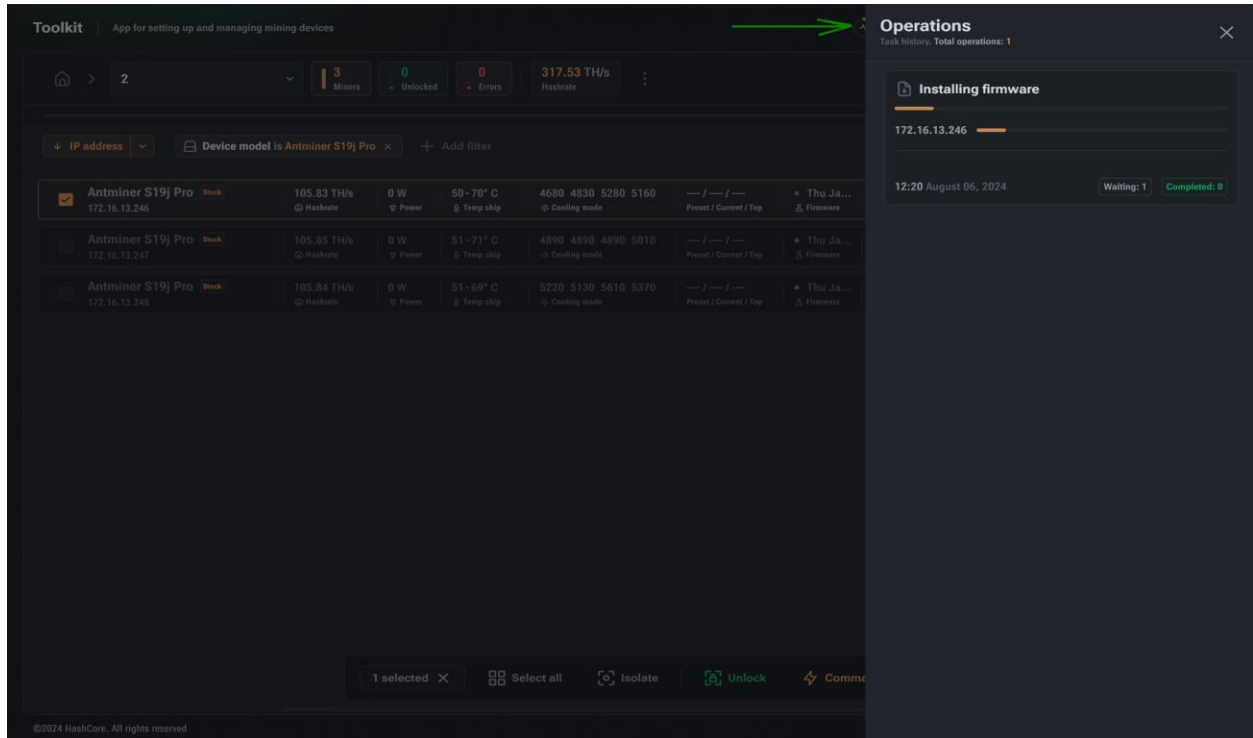

The screenshot displays the Vnish.ru Toolkit interface. A green arrow points to the 'Operations' tab in the top right corner. The main panel shows a table of mining devices, specifically Antminer S19j Pro units. The table columns include IP address, device model, hash rate, power, temperature, and cooling mode. The 'Operations' sidebar on the right shows a progress bar for 'Installing firmware' and a list of operations with status indicators (Waiting, Completed).

IP address	Device model	Hash rate	Power	Temp chip	Cooling mode	Presets	Control	Log	Firmware
172.16.13.246	Antminer S19j Pro	105.83 TH/s	0 W	50-70° C	4680 4830 5280 5160	---	f	---	* The Ja...
172.16.13.247	Antminer S19j Pro	105.85 TH/s	0 W	51-71° C	4890 4890 4890 5010	---	f	---	* The Ja...
172.16.13.248	Antminer S19j Pro	105.84 TH/s	0 W	51-69° C	5220 5130 5610 5370	---	f	---	* The Ja...

1 selected × Select all Isolate Unlock Comm

©2024 HashCore. All rights reserved