
## How to connect miners to VNISH HUB monitoring system

 Register in vnish hub monitoring system : https://my.vnishhub.com/login




2. Open account panel and copy API KEY

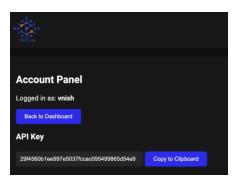


3. Download , install and run vnish hub local part (windows, mac, android) <a href="https://vnishhub.com/files/tools">https://vnishhub.com/files/tools</a>

## VNISH HUB Tutorial

4. Click on "Network Settings" button and put miners IP range (first and last address), for example 192.168.1.1 – 192.168.1.255. If your miners password is not standard (admin) you need to specify it in the miner password menu. Put the API key from the vnish hub monitoring account and click save settings.

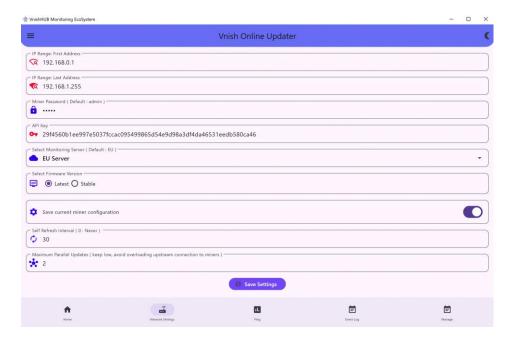

5. Now click "home" button and click "Scan network" and choose miners you want to add to vnish hub monitoring system and click "add to monitoring"

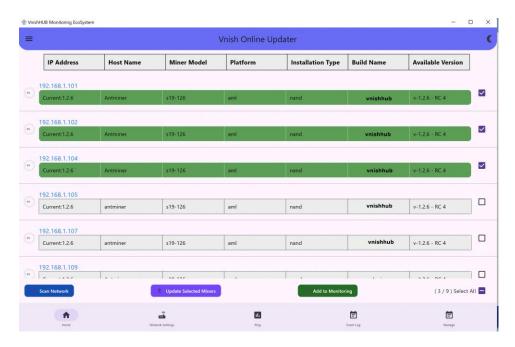

## **VNISH HUB Tutorial**

6. Open VNISH HUB monitoring account and you will find miners that were added through the local part. Now you can monitor and control the miners using the huge functionality of our monitoring

